



GAMES POSTS AND FLOOR ANCHORAGES – operation and maintenance



Continental manufactures badminton, netball, tennis and volleyball posts which are floor anchored.

1. All posts except for volleyball have a single point floor fixing.
For club model volleyball posts [Ref. 428] each post has a single fixing screw.
For international model volleyball posts [Ref. 429] each post has two fixing screws.
2. For usage, a coin/screwdriver, or similar object is required to remove the dust screw from the threaded socket in the floor. Once removed this can be stored on the post base, to replace the holding down screw.
3. All posts have transporter wheels. Ensure that these are kept in good order and free to rotate.
Tilt each post over from vertical to engage the wheels on the floor and steer the post to the location of the floor socket.
4. Set the hole in the post base over the floor socket.
Ensure the post is correctly aligned to suit the courtmarkings. Place the fixing screw through the hole in the post base for location into the floor socket. Ensure there is accurate alignment and turn the screw clockwise until it is tight down onto the post base. The post is now ready for use.
5. For badminton, tennis and volleyball, the games net will require fitting between a pair of posts.

Regularly check over gamesposts and if any replacement components are required contact Continental Sports.

See recommendations in the Continental maintenance manual concerning regular maintenance inspections and reports.

NOTE: Volleyball and tennis posts are not free-standing – when not in use store flat.