

## Bench button



### Details

Neutral coloured rubber buttons inserted into the top of traditional timber PE benches. These buttons provide cushioning when the bench is used inverted as a balance beam.