



www.continentalsports.co.uk

ELECTRICALLY WINCHED WALL FIXED, UP-FOLDING BASKETBALL GOALS



IMPORTANT

The goals have been designed so that the operator can visually monitor progress of the raising or lowering of the goals. Ensure that no one is on the basketball court while the goals are operating. While goals are in operation observe them and if any control cables unexpectedly snag on the goal, push in the STOP button on the keyfob controller, then access the goals by means of a scaffold tower to release snagged wires, or call Continental's maintenance department for advice or assistance.

OPERATION

1. To lower the goal, press and release the "DOWN" button on the keyfob or wall fixed controller
2. Constantly observe the goal ensuring it does not snag on trapped balls, shuttlecocks or other items.
3. If you observe the goal snags, or if you hear the motor affected by a snag, press the STOP (square marked) button on the keyfob or wall fixed controller immediately and remove the snag or contact Continental for advice
4. When the goal reaches the play position it will stop automatically
5. To retract the goal press the "UP" button on the keyfob or wall fixed controller
6. The goal will stop automatically when it reaches the stored position

TROUBLESHOOTING

The winch is designed to position the goal before and after play rather than to move the goal up and down constantly. The winch has a thermal cutout to prevent damage caused by this misuse. If the goal is moved up and down several times consecutively the thermal cutout may be triggered. If the goal does not respond to an up or down request as a result of recent movement up and down please wait for one hour before trying again.

See recommendations in the Continental maintenance manual concerning regular maintenance inspections and reports.