



[www.continentalsports.co.uk](http://www.continentalsports.co.uk)

## ELECTRICALLY WINCHED WALL FIXED, UP-FOLDING FUTSAL / HANDBALL GOALS



---

### IMPORTANT NOTICE

**The winches on these goals are powerful. Damage could occur to walls and the sports floor if these instructions are not followed accurately and diligently. All personnel authorised to operate the goals must be trained in these instructions.**

---

#### IMPORTANT

The goals have been designed so that the operator can visually monitor progress of the raising or lowering of the goals. Ensure that no one is under the goals while they are operating. While goals are in operation observe them and if any control cables unexpectedly snag on the goal, push the STOP button on the keyfob controller (marked with a square), then access the goals by means of a scaffold or step ladder to release snagged wires, or call Continental's maintenance department for advice or assistance.

#### LOWERING THE GOALS

1. Lower each goal individually
2. Ensure the area under the goal is clear of people and remains clear of people during the lowering
3. Press and release the "DOWN" button on the keyfob for the goal
4. Watch the operation of the goal - should the webbing straps snag or fail, or should the netting become entangled in the hinge or should the goal not operate freely for any reason, immediately press the "STOP" button on the keyfob and call Continental Sports for advice
5. The goal will stop automatically when it reaches the play position.
6. Lower the back bar (it is attached to the goal frame with magnets which will resist it being lowered)

7. Locate the two spring-loaded locating pins on each upright into the holes in the floor and lock into place

### **RAISING THE GOALS**

1. Raise each goal individually
2. Release the two spring-loaded locating pins on each upright from the holes in the floor – damage could occur to the floor if you try to raise the goal without having released these pins
3. Two people are required to raise the back bar and to ensure both magnets (one on each side) are fully attached to the frame uprights and are not snagged by the netting - damage could occur to the wall or goal if you try to raise the goal without having raised the back bar
4. Press and release the “UP” button on the keyfob for the goal
5. Watch the operation of the goal - should the webbing straps snag or fail, or should the netting become entangled in the hinge or should the goal not operate freely for any reason, immediately press the “STOP” button on the keyfob and call Continental Sports for advice
6. The goal will stop automatically when it reaches the stored position.

### **VIDEO**

Videos and detailed photographs of this product in operation are available here:

<https://www.continentalsports.co.uk/wall-fixed-up-folding-futsal-handball-goals>

The videos should be watched by those setting up the goals prior to use.

### **TROUBLESHOOTING**

The winch is designed to position the goal before and after play rather than to move the goal up and down constantly. The winch has a thermal cutout to prevent damage caused by this misuse. If the goal is moved up and down several times consecutively the thermal cutout may be triggered. If the goal does not respond to an up or down request as a result of recent movement up and down please wait for one hour before trying again.

See recommendations in the Continental maintenance manual concerning regular maintenance inspections and reports.