



www.continentalsports.co.uk

VOLLEYBALL “CLUB” POSTS



CAUTION

These posts MUST be floor anchored when in use. They are not stable when unanchored.

ASSEMBLY

There are two different posts in the set – the fixed post and the ratchet post. Position each post over the floor anchor. Pass the thumbscrew through the hole in the base of the post. Hand tighten the thumbscrew into the anchor, clamping the base of the post firmly against the floor.

On the fixed post, position the top eyebolt in one of the height setting (men’s, women’s or junior height). On the ratchet post, position the top pulley to the same height setting. Hand tighten the thumbscrews of the top eyebolt / pulley.

Attach one end of the net headline to the eyebolt on the fixed post and pass the other end of the net headline through the top pulley and clip it onto the metal angle hook on the ratchet.

Tighten the net using the ratchet. Do not over-tighten. If the post starts to bend, the tension is too great.

Connect the bottom corners of the net to the eyebolts at lower level on the posts

DISASSEMBLY

Hold the ratchet handle firmly to take the tension in the net and flip up the ratchet lock to allow the ratchet to unwind, slowly releasing the pressure in the handle whilst unwinding the handle to release the net

Remove the headline, detaching the net.

Remove the thumbscrews in the anchors and store the thumbscrews – a nut is welded to the base of the posts for this purpose.